

Ground Fixed

Capella Page 1 of 3



Instrument Components:



M8x60 Security Screw



M6x25 Security Screw



M8 Lock washer



M6 Saddle Strap

Metric Conversion: 250mm/10"


300mm/12"

450mm/18"

700mm/28" 850mm/33"

1.5m/59"


Installation Instructions

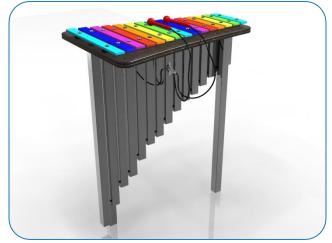







Weight of heaviest part 15kg (Corian)

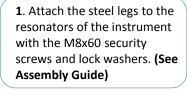




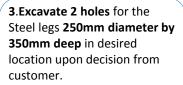


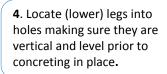

5. Once happy with location of the Instrument, fill holes using rapid hardening concrete. Be sure to compact concrete around legs and leave to dry according to manufactures guidelines.

6. Attach the 1 pair of beater to the saddle strap on the leg. (1.3)

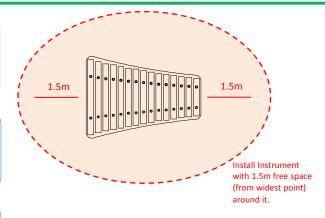

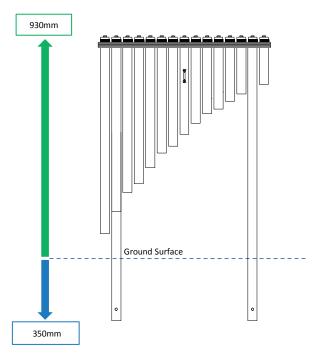










Assembly Guide PPCAPELLA

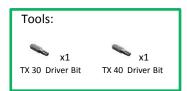

Ground Fixed

Capella Page 2 of 3



Instrument Components:



M8x60 Security Screw



M6x25 Security Screw




M8 Lock washer




M6 Saddle Strap

Thread Lock Solution Required (Not Supplied)



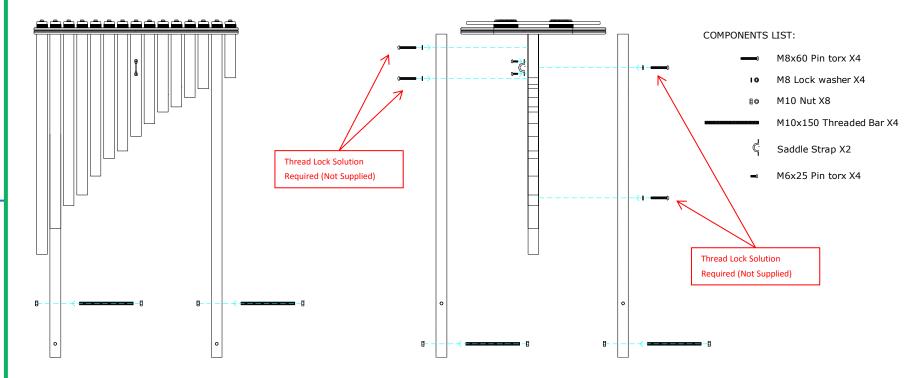



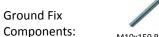







Ground Fixed

Capella Page 3 of 3



Components:



M10x150 Bolt




M10 Nut


Metric Conversion: 50mm/ 2" 250mm/ 10" 350mm/ 14" 400mm/ 16" 450mm/ 18"




Ground Fix Post Installation

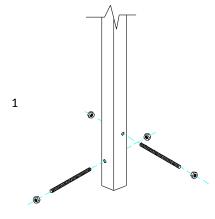


Insert M10x 150 Threaded bar into pre drilled holes in Ground Fixing Post

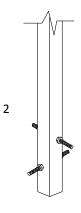

Fix M10x 150 Threaded bar in place using M10 Nuts

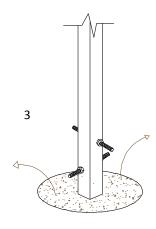

Excavate a hole with a 250mm diameter tapering down to 350mm diameter and 350mm depth

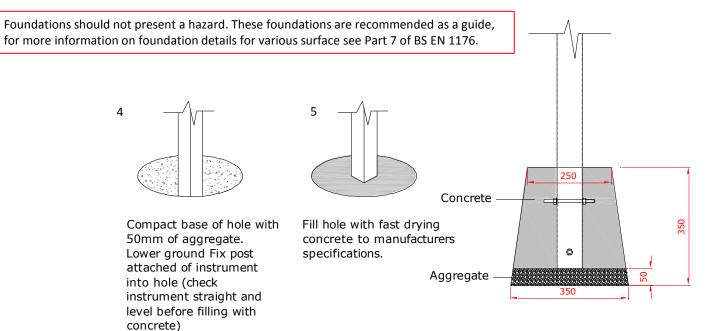

300mm min depth

Duplicate points 1-5. Capella requires 2 Ground Fix Posts