

Wall Fixed

Wall Marimba Page 1 of 3



Instrument Components:



M8 Barrel Nut



Wall mounts


Metric Conversion: 700mm/28" 850mm/33" 1m/39"



Installation Instructions



1. Mark hole positions on wall, then drill to manufacturers specified diameter and depth of M10 rawl bolt (See Wall Fix installation sheet)




Install Instrument with 1m free space (from widest point) around it.

2. Once holes are drilled insert M10 rawl bolts into holes and set in place to secure tightly



3. Attach wall mounts onto rawl bolts making sure they are tight to the wall and have the large holes to the outside. Use a long tool to tighten further.

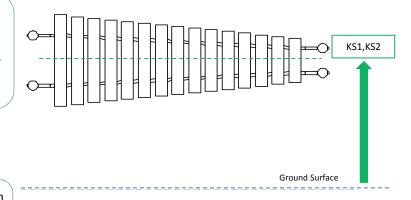

4. Once all mounts are fixed in place attach the notes using M8 Barrel Nuts and Pin torx bit.

KS2 - 850mm

KS1 - 700mm

Weight of heaviest part 12kg (Wall Marimba Notes)



Wall fixings are not supplied, installer will select suitable method of fixing. Suggested Fixing M10 Rawl Bolt



Spares available form percussionplay.com or from your local distributor



Assembly Guide PPWMAR



Wall Fixed

Wall Marimba Page 2 of 3




Instrument Components:



M8 Barrel Nut

444466666666

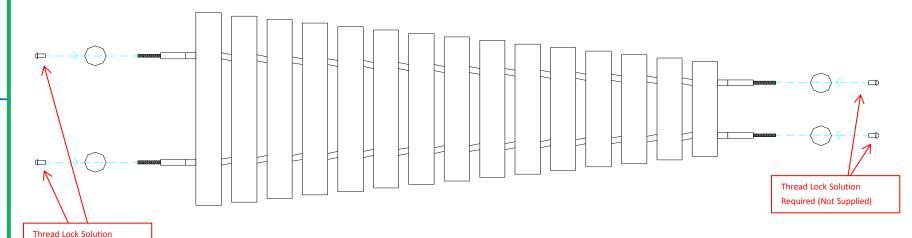

M8 Barrel Nut Pin torx X4


COMPONENTS LIST:

Thread Lock Solution
Required (Not Supplied)





Required (Not Supplied)







Wall Fixed

Wall Marimba Page 3 of 3



Instrument Components:



x2

M8 Barrel Nut



Wall mounts




Wall Fix Installation

1. Mark hole positions .





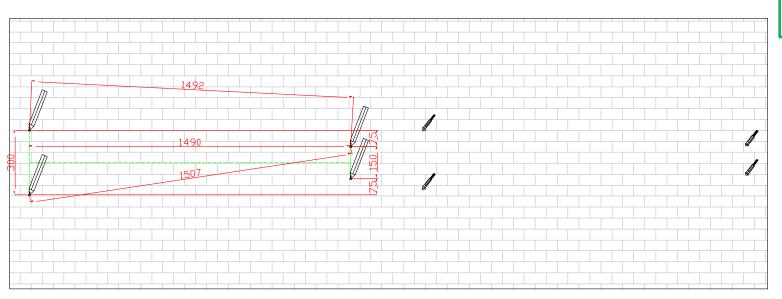

3. Fit wall mounts.

4. Attach notes .

