

Wall Fixed

Mirror Chimes Page 1 of 3



Instrument Components:



M8 Barrel Nut



x4

Wall mounts


Metric Conversion: 700mm/ 28" 850mm/ 33" 1m/ 39"



Installation Instructions




1. Mark hole positions on wall, then drill to manufacturers specified diameter and depth of M10 rawl bolt (See Wall Fix installation sheet)



Install Instrument with 1m free space (from widest point) around it.

2. Once holes are drilled insert M10 rawl bolts into holes and set in place to secure tightly

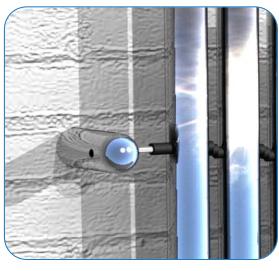

3. Attach wall mounts onto rawl bolts making sure they are tight to the wall and have the large holes to the outside. Use a long tool to tighten further.

KS1,KS2

Ground Surface

4. Once all mounts are fixed in place attach the notes using M8 Barrel Nuts and Pin torx bit.

CAUTION: Bell Lyre surface can get hot in direct sunlight, if possible install in shaded areas.

KS2 - 850mm KS1 - 700mm

Weight of heaviest part 18kg (Mirror Chimes)



Wall fixings are not supplied, installer will select suitable method of fixing. Suggested Fixing M10 Rawl Bolt



Spares available form
percussionplay.com or from your
local distributor

20 Kg



Wall Fixed

Mirror Chimes Page 2 of 3

Assembly Guide PPMIRC

Tools: TX 40 Driver Bit

COMPONENTS LIST:





Instrument Components:




M8 Barrel Nut



Wall mounts

Thread Lock Solution Required (Not Supplied)



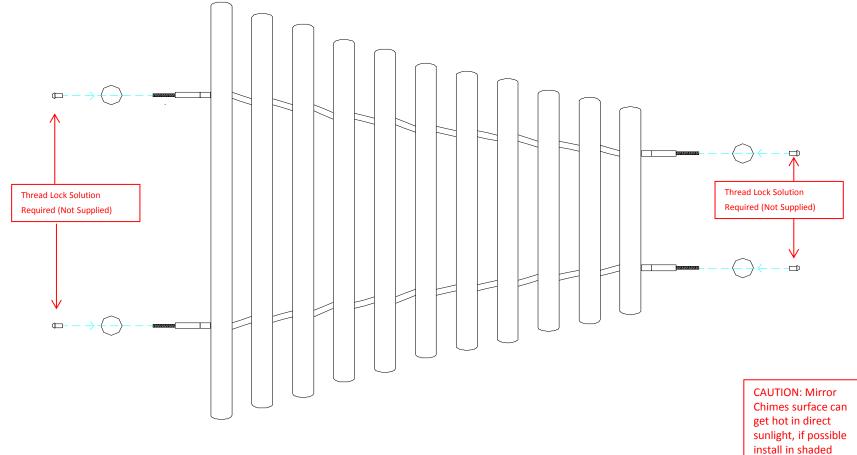



areas.



Wall Fixed

Mirror Chimes Page 3 of 3



Instrument Components:



x2

M8 Barrel Nut




Wall mounts



Wall Fix Installation

1. Mark hole positions .

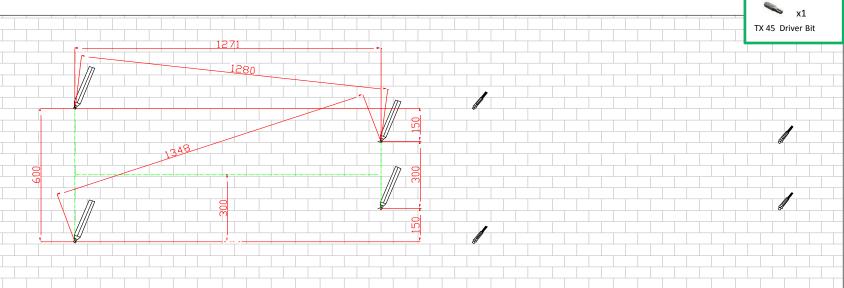

3. Fit wall mounts .

4. Attach notes .

2. Drill holes .

Tools:

